




SPARTAN

Hoist Bracket Retrofit Kit for Model 1065 Installation Instructions



Spartan Tool L.L.C.
800.435.3866
www.spartantool.com

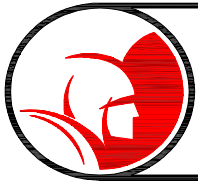


Hoist Bracket Retrofit Kit for Model 1065 Installation Instructions




Remove Cord Wrap Bracket



Line up Hoist Bracket Mounting Holes with the existing Cord Wrap holes. Insert one of the Cord Wrap screws to hold bracket in position.

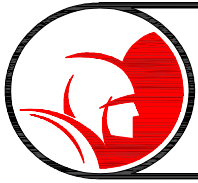


Hoist Bracket Retrofit Kit for Model 1065 Installation Instructions

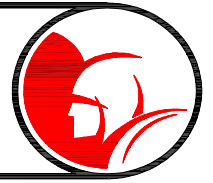

Drill mounting holes using a 9/32 inch diameter drill.



Insert 1/4-20 x 1 inch hex head screws and install hex nuts.

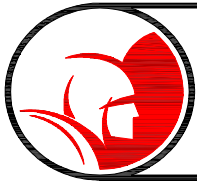

Hoist Bracket Retrofit Kit for Model 1065 Installation Instructions



Finish by relocating the Cord Wrap Bracket drilling and bolting.



Move to Right hand side and repeat Bracket drilling and bolting.



Spartan Tool, L.L.C.

1506 West Division

Mendota, IL 61342

800/435-3866

WWW.SPARTANTOOL.COM