



SPARTAN


Hoist Bracket Retrofit Kit for Model 2001 Installation Instructions



Spartan Tool L.L.C.

800.435.3866

www.spartantool.com

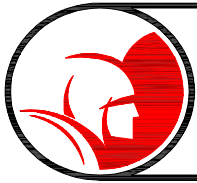

Hoist Bracket Retrofit Kit for Model 2001 Installation Instructions



Position the hoist bracket as shown above. Using a 9/32 (0.281 inch) drill bit, make the (4) four mounting holes in the 2001 frame.



Insert (4) four 1/4-20 hex head bolts, secure with hex nuts provided.



Spartan Tool, L.L.C.

1506 West Division

Mendota, IL 61342

800/435-3866

WWW.SPARTANTOOL.COM